Uniwell Lynx Quick Reference Guide



Topic: **AX/HX POS Screen Layout Programming**

Uniwell Lynx provides powerful Screen Layout customisation facilities for Uniwell AX/HX POS terminals.

This is a copy of the Uniwell Lynx Help File instructions (courtesy of Lynx Software) that you can print out and refer to when learning how to use this feature.

Navigating the Screen Layout	Double-click on any PLU Page Group, PLU Page or Function Page button to navigate to that page or page group. Menu Level 1 to 5 pages can be accessed via the drop-down list above the screen layout.
Selecting Buttons	Click the Select Buttons option below the layout grid if it is not already selected. Click a button in the grid and drag to select multiple buttons.
Moving Buttons	Click the Move Buttons option below the layout grid if it is not already selected. Drag and drop buttons to move them.
Adding Buttons	Drag and drop a selection from the list on the left to a blank button in the layout grid.
Deleting Buttons	Select the button/s to be deleted and then click Delete or press the Delete key on your keyboard.
Font Size	Select the button/s then choose an option from the Font Size drop-down list.
Text Alignment	Select the button/s then choose an option from the Align drop-down list.
Colors	Select the button/s then choose then click Color to select the foreground/background colors.
Caption	Select the button then edit the Caption field.
Size	Select the button then choose an option from the Size drop-down list.
Image	Select the button then choose then click Image to select an image and set the image alignment.
	Note : To load image files, open the Image Selection dialog and then click on Import Image Files . The files can be either IMG or BMP files. BMP or bitmap files are Windows compatible and can be displayed in the Image Selection dialog and the screen layout. IMG files however are in a format unique to the AX/HX and cannot be displayed as they are not Windows compatible. Even though IMG files cannot be displayed you can still select the image by its number.
Subject	Select the button then choose an option from the Subject drop-down list. This option is only available for applicable functions.
Area Layout	Click the Area Layout button then choose the required area layout and area usages.
	Note : There are 10 pre-defined area layouts available. Areas within the layout can be assigned to PLU Page Groups, PLU Pages, PLUs, Function Pages or Functions – depending on the level of complexity required on your POS Screen Layout.
Area Size	Click the Area Size button then set the area sizes as required. To change the size of an area, click to select the area and then use the + and - keys to increase or decrease the size of the selected area.
Update PLU Captions	Click Update PLU Captions to update all PLU captions in the screen layout. By default the PLU Captions will all be replaced with the POS Description from each item.
	Note: There is an option in Setup > Preferences > Other that can be set so that KP text will be used to update the PLU captions instead of POS Description.
Copy PLU Page	Click the Copy PLU Page button and then choose the source and destination PLU Pages. All buttons on the source PLU page will be copied to the destination PLU page.
Group PLU / Sort PLU (screen button properties)	When a Group PLU or Sort PLU button is selected on a Function Page a Group PLU or Sort PLU command button will be displayed to the right of the Copy PLU Page button.
	Click on the Group PLU or Sort PLU command button to set the properties for PLUs displayed when the Group PLU or Sort PLU button is used. You can also double-click on a Group PLU or Sort PLU button to open the dialog.

Note: Once you have made the desired changes to your Screen Layout, click 'Ok' to save the changes (or Cancel to discard) and send the revised screen layout to your POS terminals using the Send Program screen (Communications menu).